## Search for an app, setting, or file

1. From the Start screen, begin typing the name of an app, setting, or file.
2. Select the app, setting, or file from the list that is displayed on the screen.

**TIP:** You can also search by selecting the **Search** icon in the upper-right corner of the Start screen.

## Shut down your computer

From the Start screen, select the **Power** icon in the upper-right corner of the screen, and then select **Shut down**.

- or -

Display the **Start** menu, and then select **Shut down or sign out**.

## Return to the Start screen

Press the Windows button to return to the Start screen.

## Touch gestures



Tap/Double-tap to select

Two-finger pinch zoom

Two-finger click (same as right-clicking with a mouse)

Two-finger scroll

**NOTE:** Some computers, apps, and files do not support all touch gestures.

© Copyright 2014 Hewlett-Packard Development Company, L.P.

Windows is a U.S. registered trademark of the Microsoft group of companies.

Not all features are available in all editions of Windows 8. This computer may require upgraded and/or separately purchased hardware, drivers, and/or software to take full advantage of Windows 8 functionality. See http://www.microsoft.com for details.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: November 2014

Replace this box with PI statement as per spec.

775935-001

## Documentation feedback

HP is committed to providing documentation that meets your needs. To help us improve the documentation, please send any suggestions, comments, or errors to doc.feedback@hp.com. Include the document title and part number (located near the barcode) when submitting your feedback.

## Regulatory Model Number

The Regulatory Model Number (RMN) is HSTNN-C78C. The RMN is located on the back of the tablet.

## Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this tablet, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller.

For any further information or to request a full refund of the price of the tablet, please contact your seller.

## Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your tablet located with the user guides on your tablet. In some countries or regions, HP may provide a printed HP Limited Warranty in the box. For some countries or regions where the warranty is not provided in printed format, you may request a printed copy from http://www.hp.com/go/orderdocuments or write to:

North America:
Hewlett-Packard, MS POD, 11311 Chinden Blvd.
Boise, ID 83714, USA

Europe, Middle East, Africa:
Hewlett-Packard, POD, Via G. Di Vittorio, 9,
20063 Cernusco s/Naviglio (MI), Italy

Asia Pacific:
Hewlett-Packard, POD, P.O. Box 200
Alexandra Post Office, Singapore 911507

When you request a printed copy of your warranty, please include the tablet product number, warranty period (found on your service label), name, and postal address.

**IMPORTANT:** Do NOT return your HP product to the addresses above. For U.S. support, go to http://www.hp.com/go/contactHP. For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html.

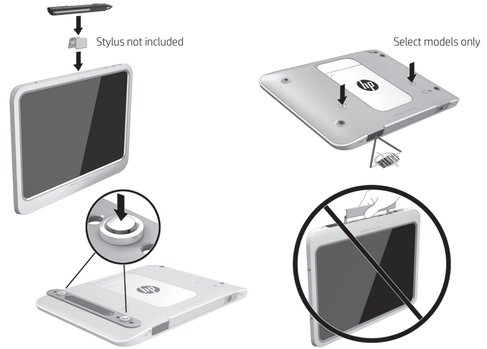


**WARNING:** To reduce the risk of electric shock or damage to the equipment:

- Plug the power cord into an AC outlet that is easily accessible at all times.
- Disconnect power from the tablet by unplugging the power cord from the AC outlet.
- If provided with a 3-pin attachment plug on the power cord, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.

For more safety and regulatory information, and for battery disposal information, refer to the *Regulatory, Safety and Environmental Notices* provided with your user guides. To locate the user guides for your tablet, see the "Find more information" section of this poster.

**WARNING:** To reduce the risk of serious injury, read the *Safety & Comfort Guide* provided with your user guides. It describes proper workstation setup, and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is also available on the Web at http://www.hp.com/ergo.

**WARNING:** To reduce the possibility of heat-related injuries or of overheating the tablet, do not place the tablet directly on your lap. Do not allow a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The tablet and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

**Product description**

This product is a lightweight tablet computer and features a thin-panel display, processor, RAM, integrated battery pack, hard drive or solid-state drive, and an external AC adapter. Depending on your tablet model, the AC adapter has a rating of 100–240 V ac, 50/60 Hz, 2.3 A, 3.3 A, or 4.6 A.

To access the latest user guide, go to http://www.hp.com/support, and select your country. Select **Drivers & Downloads**, and then follow the on-screen instructions.

**Operating Environment**

| Factor | Metric | U.S. |
|---|---|---|
| **Temperature** | | |
| Operating (writing to optical disc) | **5°C to 35°C** | 41°F to 95°F |
| Nonoperating | **-20°C to 60°C** | -4°F to 140°F |
| **Relative humidity** (noncondensing) | | |
| Operating | **10% to 90%** | 10% to 90% |
| Nonoperating | **5% to 95%** | 5% to 95% |
| **Maximum altitude** (unpressurized) | | |
| Operating | **-15 m to 3,048 m** | -50 ft to 10,000 ft |
| Nonoperating | **-15 m to 12,192 m** | -50 ft to 40,000 ft |

**Input Power**

The power information in this section may be helpful if you plan to travel internationally with the tablet.

The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100–240 V, 50–60 Hz. Although the tablet can be powered from a standalone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for use with this tablet.

The tablet can operate on DC power within the following specifications. Operating voltage and current varies by platform.

**Input Power Rating**

Operating voltage and current 19.5 V dc @ 3.33 A – 65 W

**NOTE:** This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

**NOTE:** The tablet operating voltage and current can be found on the system regulatory label. The label is affixed to the back of the tablet.

**EU Products with wireless functionality (EMF)**

This product meets international guidelines (ICNIRP) for exposure to radio frequency radiation.
This product incorporates a radio transmitting and receiving device. For notebook computers in normal use, a separation distance of 20 cm ensures that radio frequency exposure levels comply with EU requirements. Products designed to be operated at closer proximities, such as tablet computers, comply with applicable EU requirements in typical operating positions, but a minimum distance of 1cm should be maintained from the antennas.

# Setup Instructions

# Quick Setup

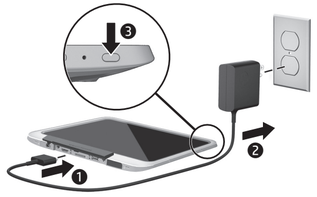

**NOTE:** Your tablet has a factory-sealed battery. Before you press the power button to turn on the tablet for the first time, make sure that the AC adapter is connected to the tablet.

Depending on your tablet model, the tablet initially displays the Windows® desktop or the Windows Start screen.

# Quick Tour

## Front

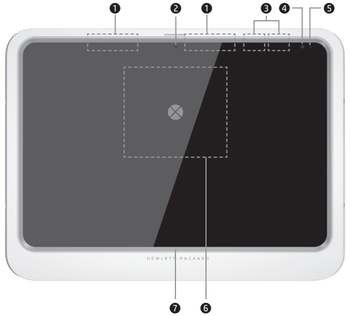

1. WWAN antennas (2)*
2. Front webcam
3. WLAN antennas (2)
4. Ambient light sensor
5. Webcam light
6. Near Field Communications (NFC) tapping area*
7. Windows® button

## Top

8. Audio-out (headphone)/Audio-in (microphone) combo jack
9. Tethered stylus connector
10. Internal microphones (2)
11. Power button

* Select models only.

**NOTE:** Tablet color, features, and accessories may vary.

## Back

12. Smart card reader
13. Webcam
14. Webcam light
15. Hand strap connectors (4)
16. Volume buttons (2)
17. Bar-code scanner buttons *
18. Security cable slot

## Bottom

19. I/O door
20. Speakers (2)
21. Shoulder strap connector
22. HDMI port
23. Power connector/Docking connector
24. USB 3.0 port
25. Bar-code scanner*

# Navigating the Windows Start Screen

The Windows Start screen provides a central location where you can access your information and email, browse the Web, stream videos, view photos, and access your social media websites.

1. **Open an app**
   Tap a Start screen app. To quickly return to the Start screen, press the Windows button.
2. **Display the charms (Search, Share, Start, Devices, and Settings)**
   Swipe from the upper-right or lower-right corner of the Start screen.
3. **Find a list of all apps on your computer**
   Swipe from the lower-left area of the Start screen, and then tap the arrow.
4. **Display the Start menu**
   Tap the **Desktop** app and then tap the **Start** icon.
5. **Switch between open apps**
   Swipe from the upper-left corner of the Start screen to reveal a list of open apps, and then tap an open app.

**TIP:** To quickly return to the Start screen, press the Windows button.

### Display the Start menu

**Desktop** Tap the **Start** icon.

**Start screen** Tap the **Desktop** app, and then tap the **Start** icon.

## Go wireless

Tap the network icon in the lower-right corner of the screen, and then connect to a network.

**NOTE:** To set up a WLAN and connect to the Internet, you need a broadband modem (either DSL or cable) (purchased separately), high-speed Internet service purchased from an Internet service provider, and a wireless router (purchased separately).

## Locate system information

Important system information is located on the back of the tablet. You may need the information when travelling internationally or when you contact support.

## Find more information

**Windows models** To learn about Windows, select the **Getting Started with Windows 8** app on the Start screen.

To access the user guides, select the **HP Support Assistant** app on the Start screen, select **My computer**, and then select **User guides**.

Guides are also available on the Web at the HP Support Center: http://www.hp.com/go/bsc.

**NOTE:** You do not need to connect to the Internet to access Help and Support and the user guides.

## Landscape and portrait views

The tablet allows you to rotate the display between landscape and portrait view.

- To rotate the display from landscape to portrait view, hold the tablet vertically with the display facing you, and then turn the tablet 90 degrees to the right (in a clockwise direction).
- To rotate the display from portrait to landscape view, hold the tablet vertically, and then turn the tablet 90 degrees to the left (in a counter-clockwise direction).